 



MAXWELL

ASSEMBLY INSTRUCTIONS

Ax1 	Ix6  M6x35mm
Bx1 	Jx3  M8x40mm
Cx2 	Kx1 
Dx1 	Lx1 
Ex1 	Mx9 
Fx1 	Nx3 
Gx5 	Ox2  M6x16mm
Hx4  M6x20mm	

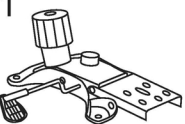