
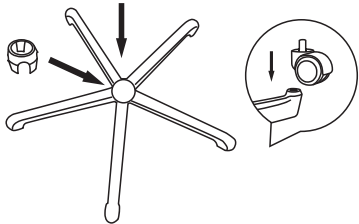
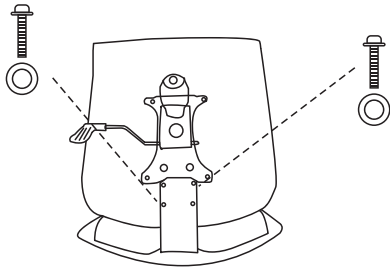
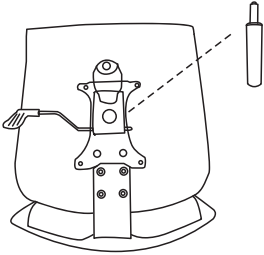
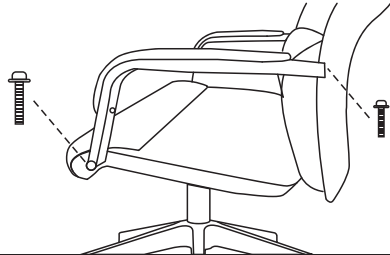
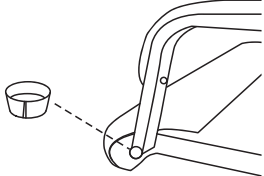





DALEN

Assembly Instructions

1		2	
Put the castor into the base by pressing. Insert the gas lift and decorative cover to the base.		Fix the back plate to the seat cushion with 4pcs(M6*25) screws and 4pcs shims.	
3		4	
Place the chassis into the pneumatic rod,		Fix the armrest to the back with M4*25 screws and to the seat cushion with F8*40 screws.	
5			
A decorative cover needs to be placed at each side of the armrest. The chair is assembled.			

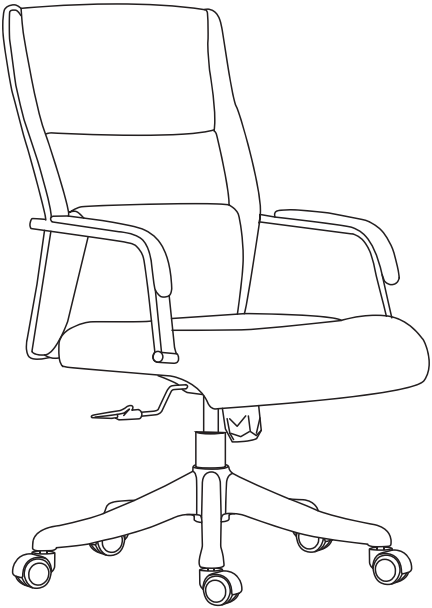

Parts list

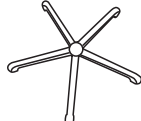				
Castor: 5pcs	Base: 1pc	Base decorative cover: 1pc	Gas lift: 1pc	Armrest: 1 pair
				
Seat cushion: 1pc	Back plate screws (M6*25): 4pcs	Armrest screws (M4*25):2pcs Armrest screws (F8*40):4pcs	Armrest decorative cover :2pcs	Shim: 4pcs
				
Backrest: 1pc		M8 wrench: 1pc M6 wrench: 1pc M4 wrench: 1pc		
Notice: Before installation,pls classify the screw,measure the screw length to easy assemble.				