



①x1	②x1	③x1
		

A x 4	B x 4	C x 1	D x 4	E x 1
				
M6 X 13mm	M6 X 45mm		Ø6 X Ø16x1.5mm	5mm

1

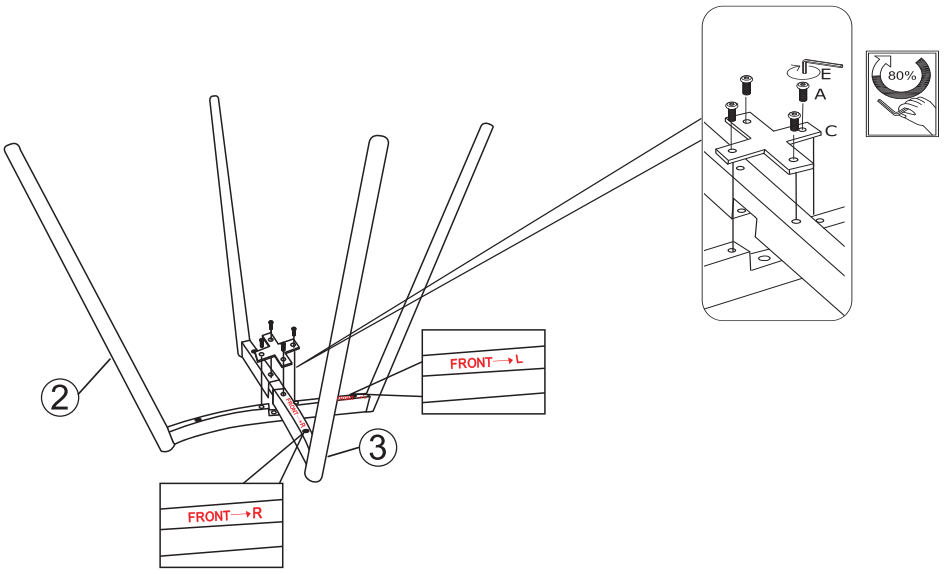

1

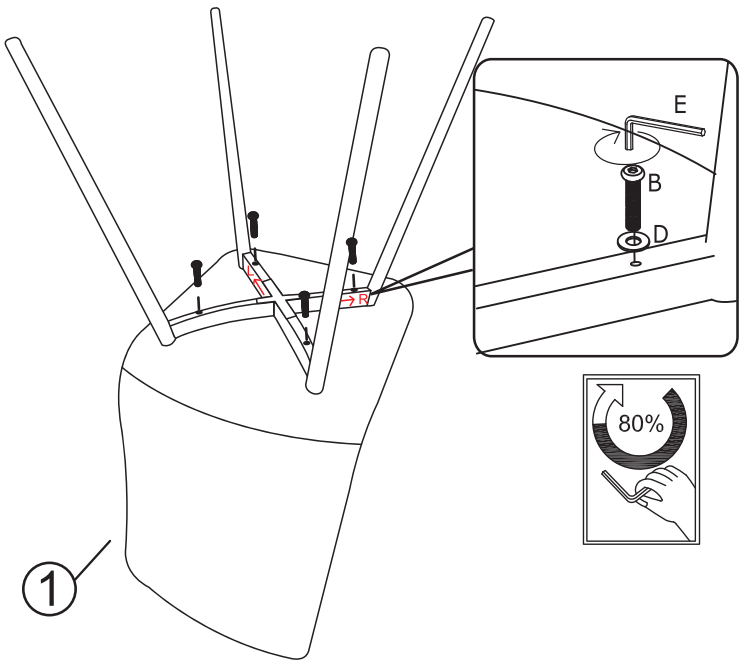

3 Put the chair onto flat place , fully tight all the screws after well adjusted flatness of the chair.

